



A Guide To Operating and Maintaining Your Gas Heating/Electric Cooling Unit

NOTE TO INSTALLER

This manual should be left with the equipment owner.

FOR YOUR SAFETY Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.


Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

FOR YOUR SAFETY WHAT TO DO IF YOU SMELL GAS


- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

A WARNING

Before performing recommended maintenance, be sure gas supply and main power switch to unit are turned off. Electrical shock could cause personal injury.

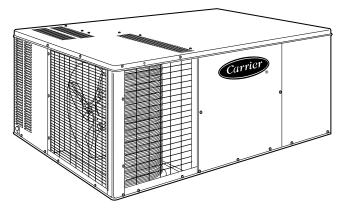

Model 48SS Without Base Rail Shown

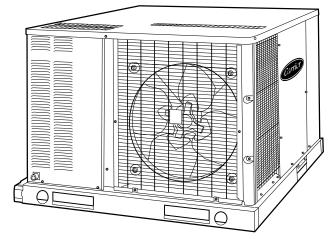

Model 48SX With Optional Base Rail

Your combination heating/cooling unit is equipped with an automatic direct spark ignition and power combustion blower.

A WARNING

Do not attempt to light by hand; personal injury may result.

TO LIGHT UNIT

- 1. Do not turn off the electrical power to unit without first turning off the gas supply.
- 2. Before attempting to start the gas heating section, familiarize yourself with all the procedures that must be followed.

If you do not follow these instructions exactly, a fire or explosion may result, causing property damage, injury, or loss of life.

Refer to Fig. 1. See Fig. 2 for location of gas valve. Refer to Fig. 3 while proceeding with the following steps.

Step 1 — Set the temperature selector on room thermostat to the lowest temperature setting and set system switch to HEAT.

Step 2 — Close the external manual shutoff valve.

Step 3 — Turn off the electrical supply to the unit.

Step 4 — Remove the burner access panel with a $\frac{5}{16}$ -in. nut driver.

Step 5 — Turn the control dial on the internal gas valve counterclockwise \checkmark to the OFF position and wait 5 minutes.

Step 6 — Turn the control dial on the internal gas valve clockwise \bigcirc to the ON position.

Step 7 — Replace the burner access panel.

Step 8 — Turn on the electrical supply to unit.

Step 9 — Open the external manual shutoff valve.

Step 10 — Set the temperature selector on room thermostat slightly above room temperature to start unit. The induceddraft combustion-air fan will start. Main gas valve will open and main burners should ignite within 5 seconds. If the burner does not light within 5 seconds, the ignition module will go into a Retry mode after a period of approximately 22 seconds (following the 5-second ignition period).

If the burners do not light within 15 minutes of the initial call for heat, there is a lockout.

Step 11 — Set the temperature selector on room thermostat to desired setting.

A WARNING

- 1. If the main burners fail to light, or the blower fails to start, shut down gas heating section and call your dealer for service.
- 2. Never attempt to manually light the main burners on unit with a match, lighter, or any other flame. If the electric sparking device fails to light the main burners, refer to the following shutdown procedures, then call your dealer as soon as possible.

Failure to follow these requirements could result in serious personal injury.

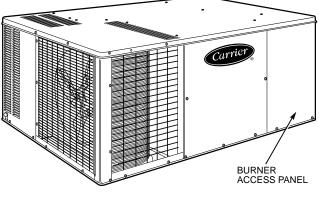


Fig. 1 — Gas Heating/Electric Cooling Unit (Unit 48SS Shown)

TO SHUT UNIT OFF

A WARNING

Do not turn off the electrical power to unit without first turning off the gas supply.

Failure to follow these procedures can result in serious fire or personal injury.

NOTE: If unit is being shut down because the heating season has ended, make sure to turn on power to cooling system.

If unit is being shut down because of a malfunction, call your dealer as soon as possible.

Should overheating occur or the gas supply fail to shut off, shut off the manual gas valve to the unit before shutting off the electrical supply.

Do not use this unit if any part has been under water. Immediately call a qualified service technician to inspect the unit and to replace any part of the control system and any gas control which has been under water.

Refer to Fig. 4 while proceeding with the following steps.

Step 1 — Set the temperature selector on room thermostat to lowest temperature setting and set system switch to OFF.

Step 2 — Close the external manual shutoff valve.

Step 3— Turn off the electrical power supply to the unit.

Step 4 — Remove the burner access panel.

Step 5 — Turn the control dial on the internal gas valve counterclockwise \bigwedge to the OFF position.

Step 6 — Replace the burner access panel.

Step 7— Restore electrical power to the unit and set system switch to COOL to ensure operation of the cooling system during the cooling season.

ROUTINE MAINTENANCE

All routine maintenance should be handled by skilled, experienced personnel. Your dealer can help you establish a standard procedure.

For your safety, keep the unit area clear and free of combustible materials, gasoline, and other flammable liquids and vapors.

To assure proper functioning of the unit, flow of combustion and ventilating air must not be obstructed from reaching the unit. Clearance of at least 30 in. is required on all sides except the duct side.

MAINTENANCE AND CARE FOR THE EQUIPMENT OWNER

Before proceeding with those things you might want to maintain yourself, please carefully consider the following:

A WARNING

- 1. TURN OFF GAS SUPPLY AND ELECTRICAL POWER TO YOUR UNIT BEFORE SERVICING OR PERFORMING MAINTENANCE.
- 2. Do not turn off electrical power to this unit without first turning off the gas supply.
- 3. When removing access panels or performing maintenance functions inside your unit, be aware of sharp sheet metal parts and screws. Although special care is taken to reduce sharp edges to a minimum, be extremely careful when handling parts or reaching into the unit.

Air Filters — Air filter(s) should be checked at least every 3 or 4 weeks and changed or cleaned whenever it becomes dirty. Dirty filters produce excessive stress on the blower motor and can cause the motor to overheat and shut down. Table 1 indicates the correct filter size for your unit. Refer to Fig. 5 to access the filter(s).

To replace or inspect filter(s) (or accessory filter rack when supplied):

- 1. Remove the filter access panel using a 5/16-in. nut driver.
- 2. Remove the filter(s) by pulling the filter(s) out of the unit. If the filter(s) is dirty, clean or replace with new one.

When installing the new filter(s), note the direction of the airflow arrows on the filter frame.

If you have difficulty in locating your air filter(s), or if you have questions concerning proper filter maintenance, contact your dealer for instructions. When replacing filters, always use the same size and type of filter that was supplied originally by the installer.

Table 1 — Indoor-Air Filter Data

UNIT SIZE 48SS		018-024		030-036	042	048-060	
Filter Size	•	20 x 20		20 x 24	24 x 24	24	4 x 30
UNIT SIZE 48SX			024-036	042-06	0		
Filter Size			24 x 24	24 x 30)		

Never operate your unit without filters in place. Failure to heed this warning may result in damage to the blower motor and/or compressor. An accumulation of dust and lint on internal parts of your unit can cause loss of efficiency and, in some cases, fire. **Heat Exchanger** — To ensure dependable and efficient heating operation, the heat exchanger should be checked by a qualified maintenance person before each heating season, and cleaned when necessary. This checkout should not be attempted by anyone not having the required expertise and equipment to properly do the job. Checking and/or cleaning the heat exchanger involves removing the gas controls assembly and the flue collector box cover and, when completed, reinstalling the gas controls assembly for proper operation. Also, the flue collector box cover must be replaced correctly so that a proper seal is maintained. Contact your dealer for the required periodic maintenance.

Fans and Fan Motor — Periodically check the condition of fan wheels and housings and fan-motor shaft bearings. No lubrication of condenser- or evaporator-fan bearings or motors is required or recommended.

Evaporator and Condenser Coils — Cleaning of the coils should only be done by qualified service personnel. Contact your dealer for the required annual maintenance.

Condensate Drain — The drain pan and condensate drain line should be checked and cleaned at the same time the cooling coils are checked by your dealer.

Compressor — All compressors are factory-shipped with a normal charge of the correct type refrigeration grade oil in them and should rarely require additional oil. The service person must be certain the proper oil level is maintained in the compressor when it is installed and running.

Condenser Fan

Do not poke sticks, screwdrivers, or any other object into revolving fan blades. Severe bodily injury may result.

The fan must be kept free of all obstructions to ensure proper cooling. Contact your dealer for any required service.




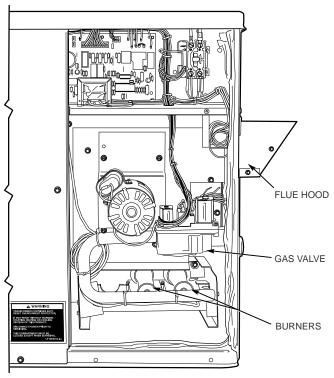


Fig. 2 — Gas Heating/Electric Cooling Unit (Unit 48SS Shown)

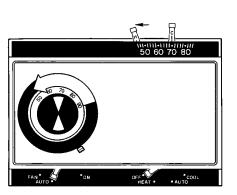


STEP 1

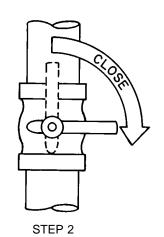


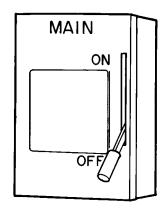


STEP 3

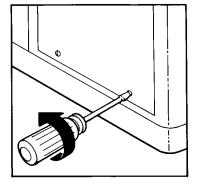


STEP 4

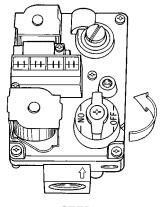



STEP 5

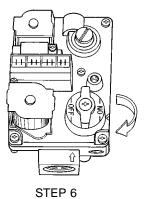

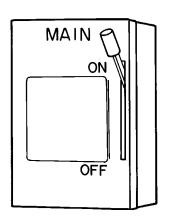


STEP 8

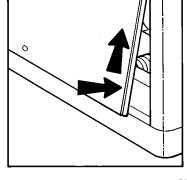

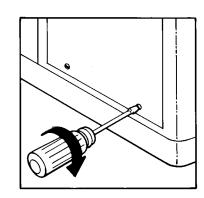

STEP 7

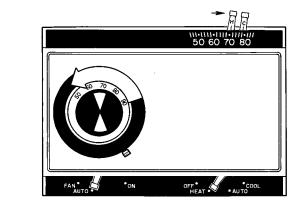


STEP 10

Fig. 3 — To Light Unit


00


(0)

STEP 9

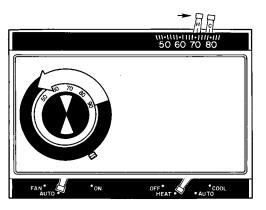


STEP 1

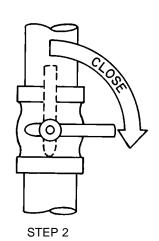


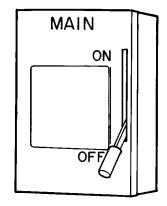



STEP 3

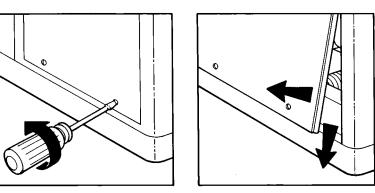

STEP 4

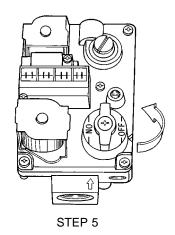


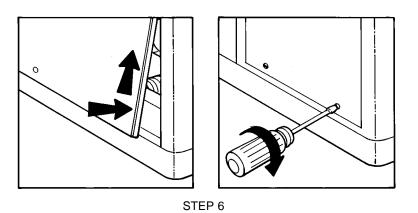

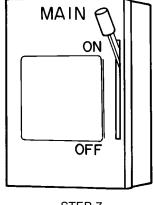

STEP 7



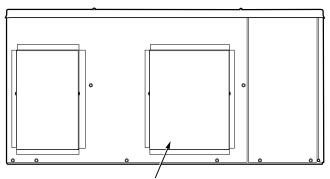

FILTER ACCESS PANEL

Fig. 5 — Filter Access Panel — Vertical Supply Shown

Electrical Controls and Wiring — Electrical controls are difficult to check without proper instrumentation; therefore, if there are any discrepancies in the operating cycle, contact your dealer and request service.

Refrigerant Circuit — The refrigerant circuit is difficult to check for leaks without the proper equipment; therefore, if inadequate cooling is suspected, contact your local dealer for service.

Combustion Area and Vent System — The combustion area and vent system should be inspected visually before each heating season. The normal accumulation of dirt, soot, rust, and scale can result in loss of efficiency and improper performance if allowed to build up.

A CAUTION

If your unit makes an especially loud noise when the main burners are ignited, shut down the heating section and call your dealer.

Proceed as follows to inspect the combustion area and powerventing system of your unit.

- 1. Turn off electrical power and gas supply to your unit.
- 2. Remove burner access panel. (See Fig. 1.)
- 3. Using a flashlight, carefully inspect the burner areas for dirt, soot, rust, or scale. See Fig. 2.

A CAUTION

If dirt, soot, rust, or scale accumulations are found, call your dealer and do not operate your heating section.

- 4. When you have completed your inspection, follow the start-up procedures in this manual to restore your unit to operation.
- 5. Observe unit heating operation.

A WARNING

Components in heat section may be hot after unit has been started up. When observing flame, be careful not to get close to or touch heating components or serious personal injury may result. Watch the burner flame to see if it is bright blue. If you observe a suspected malfunction or if the burner flames are not bright blue, call your dealer.

6. Replace burner access panel.

Unit Panels — After performing any maintenance or service on the unit, be sure all panels are fastened securely in place to prevent rain from entering unit cabinet and to prevent disruption of the correct unit airflow pattern.

REGULAR DEALER MAINTENANCE

In addition to the type of routine maintenance you might be willing to perform, your unit should be inspected regularly by a properly trained service technician. An inspection (preferably each year, but at least every other year) should include the following:

- 1. Inspection of all flue product passages including the burners, heat exchanger, and flue collector box.
- 2. Inspection of all combustion- and ventilation-air passages and openings.
- 3. Close inspection of all gas pipes leading to and inside of your unit.
- 4. Inspection and, if required, cleaning of the condenser and evaporator coils.
- 5. Inspection and, if required, cleaning of the evaporator drain pan.
- 6. Inspection and cleaning of blower wheel housing and motor.
- 7. Inspection of all supply-air and return-air ducts for leaks, obstructions and insulation integrity. Any problems found should be resolved at this time.
- 8. Inspection of the unit base to ensure that no cracks, gaps, etc., exist which may cause a hazardous condition.
- 9. Inspection of the unit casing for signs of deterioration.
- 10. Inspection of all electrical wiring and components to assure proper connection.
- 11. Inspection for leaks in the refrigerant circuit. Pressurecheck to determine appropriate refrigerant charge.
- 12. Inspection of compressor oil level.
- 13. Operational check of the unit to determine working conditions. Repair or adjustment should be made at this time.

Your servicing dealer may offer an economical service contract that covers seasonal inspections. Ask for further details.

Complete service instructions can be found in the unit Installation, Start-Up and Service Instructions.

WARRANTIES

Units 48SS and 48SX each have a separate warranty located at the back of this book. Be sure to read the warranty carefully to determine the coverage for your unit.

BEFORE YOU CALL FOR SERVICE, CHECK FOR SEVERAL EASILY-SOLVED PROBLEMS

If insufficient heating or cooling is suspected:

() Check for sufficient airflow. Check the air filter for dirt. Check for blocked return-air or supply-air grilles. Be sure they are open and unobstructed. If these checks do not reveal the cause, call your servicing dealer.

If your unit is not operating at all, check the following list for easy solutions:

() Check to be sure that your thermostat temperature selector is set above the indoor temperature during the heating season, or below the indoor temperature during the cooling season. Be sure the system switch is in the proper HEAT or COOL position and not in the OFF position.

() Is the electrical supply switch ON? Are any fuses blown, or has the circuit breaker tripped?

() During the heating season, check the external manual shutoff valve. Is this lever parallel with the pipe, indicating that the valve is open? Or is the lever at a right angle, indicating that the valve is closed? If closed, has the gas been shut off for safety reasons? Otherwise, you may open the valve and follow the start-up procedures listed in this manual.

NOTE: Before proceeding with the next check, turn OFF the gas supply, then the electrical power supply to the unit. Remove the control access door.

() During the heating season, check the control dial on the internal gas valve. Is it in the ON position? If it is not, be sure it was not turned off for the purpose of safety. If no safety hazards exist, follow the start-up procedures in this manual.

() If your unit still fails to operate, call your servicing dealer for troubleshooting and repairs. Specify the model and serial numbers of your unit. (Record them in this manual in the space provided.) If the dealer knows exactly which unit you have, he may be able to offer suggestions over the phone, or save valuable time through knowledgeable preparation for the service call.

IN CASE OF TROUBLE

If after performing the above and unit performance is still unsatisfactory, shut off the unit and call your dealer.

Dealer's Name	
Telephone	
Unit Model	
Unit Serial Num	her

 Plaa	MPORTANT!	IMPORTANT n Within The Next 10 D	! lave
			lays.
● 1. □ Mr. First Name	2. □ Mrs. 3. □ Ms. 4. □ Initial La	Miss Ist Name	
Street		Apt. No.	
City		State ZIP Code	
Date of Installation: Month Day Y	/ear	Date of birth of person whose name appears above:	
Important! For proper registration, please fill in the	ne model	Month	Year
number, and serial number of this product: A. Model Number:		Excluding yourself, what is the SEX and ing in your household?	AGE (in years) of children and other adults li
		1. IN No one else in household	- Formela Area
B. Serial Number:		<u>Male</u> <u>Female Age</u> <u>Mak</u> 1. □ 2. □ ↓ years 1. □	,,
		1. □ 2. □ ⊥ years 1. □ 1. □ 2. □ ↓ years 1. □	2. □ years 2. □ years
What type of product is this? Central Air Conditioner 		Marital Status:	
2. 🗆 Gas Furnace		1. Married 2. Divorced/Separated	3. □ Widowed 4. □ Never Married (Single)
3. Oil Furnace . Electric Furnace		·	
5. 🗆 Heat Pump		Occupation: Homomotion:	You Spous
A. Price paid for this product (excluding installat	tion charges and sales tax).	Homemaker	<i></i>
\$00			· · · · · · · · · · · · · · · · · · ·
B. Price paid for installation:		Sales/Marketing	
		Tradesman/Machine Oper./Laborer	· · · · · · · · · · · · · · · · · · ·
♥ Launden Land Land Land		Retired	· · · · · · · · · · · · · · · · · · ·
Name of company that sold you this product:	1 1 1 1	Self Employed/Business Owner	
		Which group describes your annual fam	ilv income?
When did you acquire your product?		1. Under \$15,000	7. 🗆 \$40,000-\$44,999
1. Upon purchase of a new dwelling.		2. □ \$15,000-\$19,999 3. □ \$20,000-\$24,999	8. □ \$45,000-\$49,999 9. □ \$50,000-\$59,999
 To replace an older system of the same brand. To replace an older system of another brand. 	d.	4. □ \$25,000-\$29,999 5. □ \$30,000-\$34,999	10. \$60,000-\$74,999 11. \$75,000-\$99,999
 Within a year after purchasing a dwelling with □ 2-4 years after buying a dwelling with no cent 	h no central air.	6. □ \$35,000-\$39,999	12. 🗆 \$100,000 & over
6. Over 4 years after buying a dwelling with no			
	and all was that another 2	Education: (please check those which a Some High School or Less	
If you replaced an older system, approximately h 1. Don't know 4. 9-11 years	7. 🗆 18-20 years	Completed High School	
2. □ 1-5 years 5. □ 12-14 years 3. □ 6-8 years 6. □ 15-17 years	8. □ 21-24 years 9. □ Over 24 years	Some College	
	0. El Otel 24 years		· · · · · · · · · · · · · · · · · · ·
If this is a replacement, what brand did you previ		Completed Graduate School	····· · · · · · · · · · · · · · · · ·
1. □ Amana 6. □ Janitrol 2. □ Bryant 7. □ Lennox	11. Snyder 12. Tempstar	Which credit cards do you use regularly	?
3. □ Carrier 8. □ Payne 4. □ Day & Night 9. □ Rheem	13. □ Trane 14. □ York	 American Express, Diners Club MasterCard, Visa, Discover 	
5. 🗆 Heil 10. 🗆 Ruud	15. 🗆 Other	3. Department Store, Oil Company, etc	D.
What factors most influenced your selection of th 1. Brand reputation 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	bis product? (Check a maximum of two.) 5.	4. Do not use credit cards	
2. 🗋 Dealer reputation 7	7. □ Location of dealer 3. □ Dealer's installation policy	For your primary residence, do you:	
of this brand	 Friend's/relative's recommendation 	 1. □ Own a House? 2. □ Own a Townhouse or Condominium 	?
	O. Contractor's/dealer's recommendation Other	 a. Rent a House? 4. Rent an Apartment, Townhouse or 0 	Condominium?
) To help us understand our customers' lifestyles, (please indicate the interests and activitie:	s in which <u>you</u> or <u>your spouse</u> enjoy participatir	ng on a <u>regular</u> basis:
01. Bicycling Frequently 14.	. Vegetable Gardening	27. □ Health/Natural Foods 28. □ Photography	39. □ Our Nation's Heritage 40. □ Real Estate Investments
03. □ Physical Fitness/Exercise 16.	. Flower Gardening	29. 🗆 Home Furnishing/Decorating	 Stock/Bond Investments
	. Sewing Crafts	 30. □ Attending Cultural/Arts Events 31. □ Fashion Clothing 	 42. □ Entering Sweepstakes 43. □ Casino Gambling
	. Automotive Work Electronice	32. Fine Art/Antiques	44. Science Fiction
08. Fishing Frequently 21.	. Electronics . Home Workshop/Do It Yourself	33. □ Foreign Travel 34. □ Travel in the USA	 45. Wildlife/Environmental Issues 46. Dieting/Weight Control
	. □ Recreational Vehicles . □ Stereo, Records/Tapes/CDs	35. □ Gourmet Cooking 36. □ Wines	47. □ Science/New Technology 48. □ Self Improvement
11.	Buy Pre-Recorded Videos D Avid Book Reading	37. □ Coin/Stamp Collecting 38. □ Collectibles/Collections	49. □ Walking for Health 50. □ Watching Sports on TV
13. □ Grandchildren 26. Using the numbers in the above list, please	. Bible/Devotional Reading		
indicate the 3 most important activities for: Please check all that apply to your household:	You	Spouse	
1. Regularly Purchase Items 3.	. D Member of Frequent Flyer Program	6. 🗆 Have a Microwave Oven	9. 🗆 Use a Personal Computer
	 □ Support Health Charities □ Subscribe to Cable TV 	7. □ Have a CD Player 8. □ Have a VCR	10. □ Have a Dog 11. □ Have a Cat
Thanks for taking the time to fill out this questionnaire. Your a	answers will be used for market research studies an	or reports - and will belo us better serve you in the future	They will also allow you to receive important mailings
special offers from a number of fine companies whose produ information about activities in which you are involved and les If you have comments or suggestions about our p	acts and services relate directly to the specific interests about those in which you are not. Please check his product please write to: Carrier	sts. hobbies, and other information indicated above. Thro ere if, for some reason, you would prefer not to participate ions Department	ugn mis selective program, you will be able to obtain m e in this opportunity.

Camer
Consumer Relations Departm
P.O. Box 4808
Syracuse, NY 13221
or call 1-800-C-A-R-R-I-E-R

FOLD HERE

Please send products and other correspondence to:

Carrier Consumer Relations Department P.O. Box 4808 Syracuse, NY 13221



CARRIER CORPORATION P O BOX 173244 DENVER CO 80217-3244

MODEL 48SS WARRANTY

Carrier Air Col Division of Carrier Corporation	nditioning		Carrier
<u>IF Y</u>	OUR UNIT DOES NOT WORK	, FOLLOW THESE STEPS IN ORD	ER:
5	Homeowner's Packet. If his r is a new residence.	1	
Unit Model No.		Unit Serial No	
Date of Installation		Installed By	
Name of Owner		Address of Installation	

Carrier Corporation			
FOI	SERVICE OR REPAIR, FOLLOW THESE STEPS IN ORDER		
FIRST:	Contact the installer. You may find his name on the product or in your Homerowner's Packet. If his name is not known, call your builder if yours is a new residence.		
SECON	: Contact the nearest CARRIER distributor. (See telephone yellow pages.)		
THIRD:	Contact: Carrier Corporation Customer Relations Department P.O. Box 4808 Syracuse, New York 13221 Phone: 1-800-CARRIER (227-7437)		
Unit Model No.	Unit Serial No		
Date of Installation	Installed by		
Name of Owner	Address of Installation		

Carrier Extended Protection Limited Warranty

ONE-YEAR WARRANTY — This CARRIER product is warranted to be free from defects in material and workmanship under normal use and maintenance for a period of one year from the date of original installation whether or not actual use begins on that date. A new or remanufactured part to replace any defective part will be provided are CARRIER'S sole option without charge for the part iself; PRO-VIDED the defective part is returned to our distributor. This warranty anolies only to the product in its original installation location and is applies only to the product in its original installation location and is voided if the product is reinstalled elsewhere.

THIS WARRANTY DOES NOT INCLUDE LABOR or other costs incurred for diagnosing, repairing, removing, installing, shipping, ser-vicing or handling of either defective parts or replacement parts. Such costs may be covered by a separate warranty provided by the installer

EXTENDED NINE-YEAR WARRANTY ON COMPRESSOR ONLY During the second through tenth years after the date of original installation, CARRIER further warrants the compressor against defects in material or workmanship under normal use and mainte-nance. A new or remanufactured compressor will be provided at CARRIER'S sole option under the same conditions as stated in the One-Year Warranty

EXTENDED NINE-YEAR WARRANTY ON HEAT EXCHANGER ONLY — During the second through tenth years after the date of original installation, CARRIER further warrants the heat exchanger against defects in material or workmanship under normal use and maintenance. A heat exchanger will be provided under the same conditions as stated in the One-Year Warranty.

LIMITATIONS OF WARRANTIES – ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES – ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH THE LIMITED WARRANTY IS GIVEN, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED OR CHANGED BY ANY DISTRIBUTOR,

DEALER OR OTHER PERSON WHATSOEVER. ALL WORK UN-DER THE TERMS OF THIS WARRANTY SHALL BE PERFORMED DURING NORMAL WORKING HOURS.

ALL REPLACEMENT PARTS, WHETHER NEW OR REMANUFAC-TURED, ASSUME AS THEIR WARRANTY PERIOD ONLY THE REMAINING TIME PERIOD OF THIS WARRANTY.

CARRIER WILL NOT BE RESPONSIBLE FOR:

- 1. Normal maintenance as outlined in the installation and servicing instructions or owners manual including coil cleaning, filter cleaning and/or replacement and lubrication.
- Damage or repairs as a consequence of faulty installation or ap-plication by others. 2.
- Failure to start due to voltage conditions, blown fuses, open cir-cuit breakers or other damages due to the inadequacy or inter-З. ruption of electrical service.
- Damage or repairs needed as a consequence of any misapplica-tion, abuse, improper servicing, unauthorized alteration or im-proper operation.
- Damage as a result of floods, winds, fires, lightning, accidents, corrosive atmosphere or other conditions beyond the control of CARRIER. 5.
- 6. Parts not supplied or designated by CARRIER.
- CARRIER products installed outside the continental U.S.A., Alaska, Hawaii and Canada. 7.
- Electricity or fuel costs or increases in electricity or fuel costs from any reason whatsoever, including additional or unusual use of supplemental electric heat. 8.
- ANY SPECIAL, INDIRECT OR CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGE OF ANY NATURE WHATSO-EVER. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to 9. vou.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Form No. 530-079 (New 8/94)

Copyright 1994 Carrier Corporation

8-94